

# tCentric Stacker Chair – Disassembly Guide

Tools needed:

- Air gun/driver
- Screwdriver/wedge
- Philips head driver bit

1. Remove the 4 screws under the seat frame to take out the seat.



2. Remove the back cap using a wedge or flathead screwdriver.



3. Remove the screws on frame post to take out the back.

